





## INSUL-ANCHORS

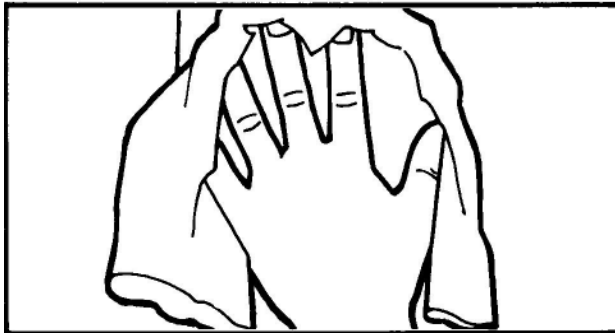


### 1. Wipe surface clean.

Anchor must be applied to a clean, dry, nonpainted surface.

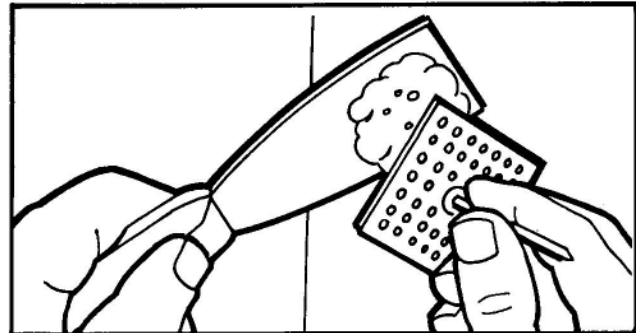


### 2. Apply adhesive to anchor.

Spread a daub of General Purpose Adhesive on to the perforated base with a putty knife.

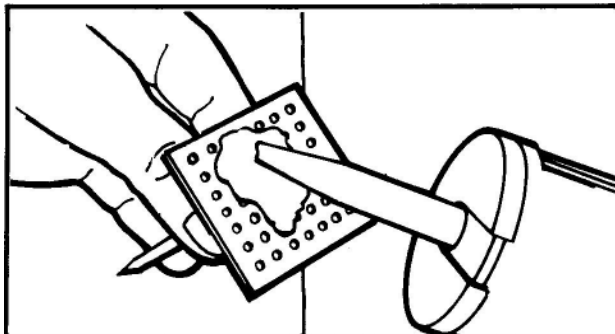


### 3. Or ... Apply adhesive to anchor.

Or ... cover the perforated base with General Purpose Adhesive from a caulking gun.

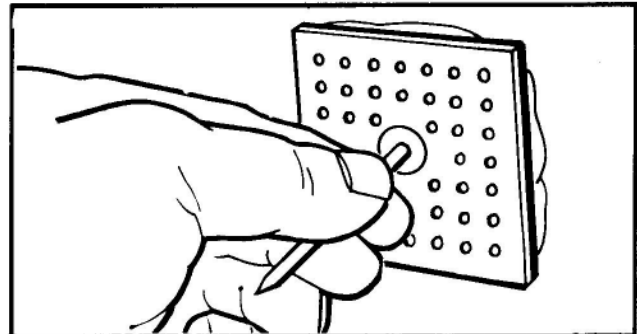


### 4. Stick anchor in place.

Press anchor into position with a twisting motion to assure an even spread of adhesive. The adhesive should protrude through the perforations and beyond the edges of the base.

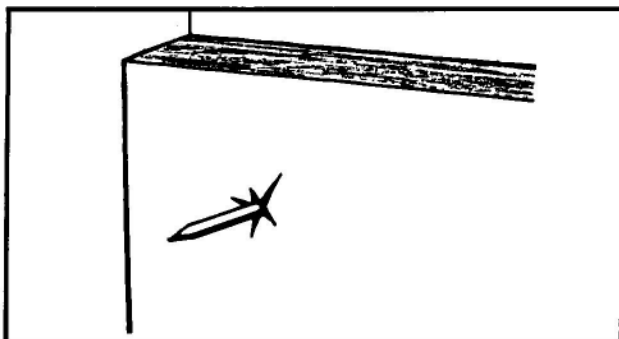

### 5. Hang insulation.

NOTE: ALLOW ADHESIVE TO DRY THOROUGHLY before hanging insulation, usually 24-48 hours. During this time, use with

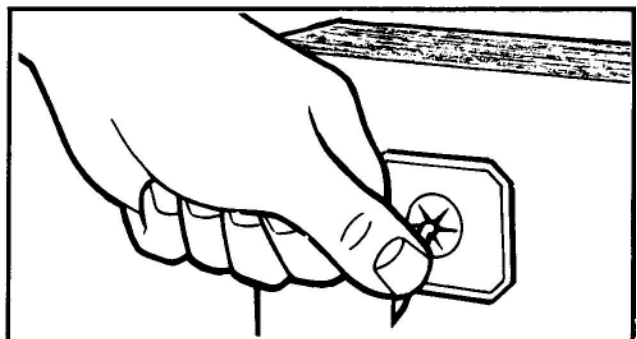

### 6. Secure with washer.

Secure insulation in place with a self-locking washer and then bend over or clip off the

usually 24-48 hours. Drying times vary with spindle.  
temperature.

---

**All information contained herein is subject to change without notice.  
For more information-consult your nearby Continental Field sales representative.**